


Safeline Corp.

Sit 'n' Stroll™

5-in-1 Combination Carseat/Stroller

U.S. Patents #5,104,134 and 4,620,771 International Patents Listed Inside

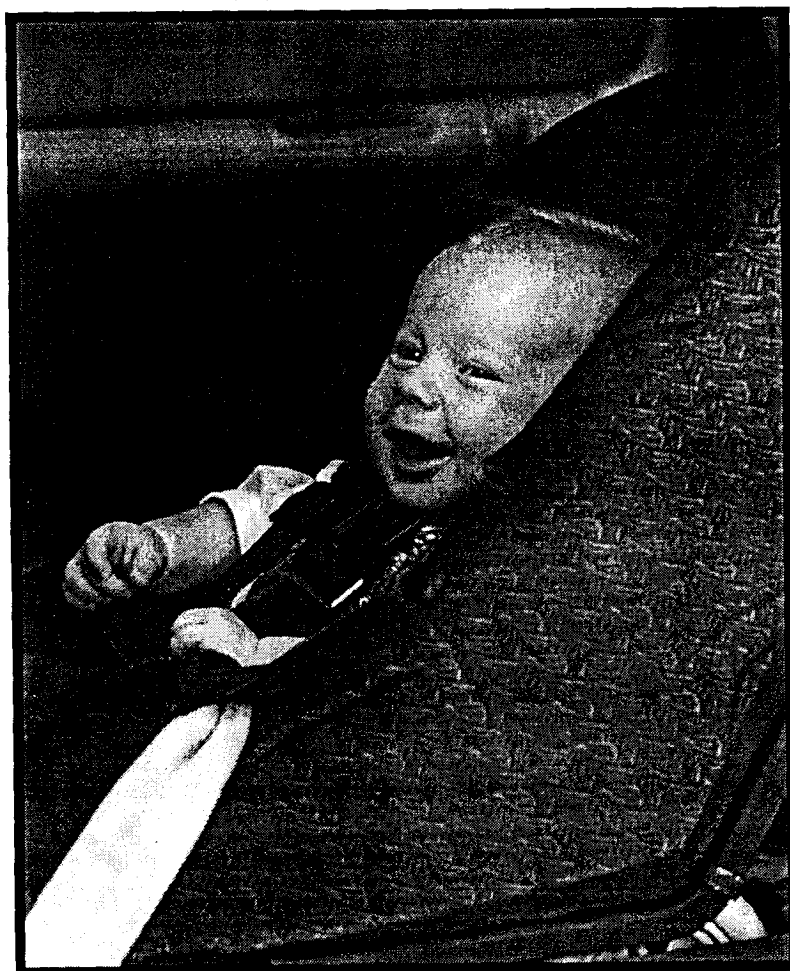

1-800-829-1625

1777 South Bellaire Street, Suite 330 ♦ Denver, Colorado 80222

Phone: (303) 757-2400 ♦ Fax: (303) 757-1988

E-mail: service@safelinecorp.com ♦ Website: www.safelinecorp.com

Thank you for purchasing the Sit'n'Stroll 5-in-1 Combination Car Seat/Stroller™. The Sit'n'Stroll™ is the most advanced car seat/stroller available, and we believe the simplest, safest and most convenient way to travel with an infant.

The most important benefit the Sit'n'Stroll™ can provide is increased protection for your child. Studies have shown the use of a child restraint system reduces the likelihood of death and injury caused by the tremendous forces involved in an automobile accident. Please follow these instructions carefully to minimize the risk of injury or death to your child in the event of a sudden stop or collision. No system can guarantee the safety of your baby, but child restraints have been proven so effective they are required in all 50 states and by most industrialized nations in the world.



Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address and the restraint's model number and manufacturing date to Safeline Corporation, 1777 South Bellaire Street, Suite #330, Denver, Colorado 80222 or call 303-757-2400. For recall information, call the U.S. Government's Auto Safety Hotline at 1-800-424-9393 (202-366-0123 in D.C. area).



Limited Six Month Warranty

All Safeline products purchased from an authorized Safeline dealer are warranted against defective materials and workmanship for six months from the original date of purchase. This warranty does not include any problems associated with normal wear, abuse, misuse or negligence by the purchaser. This warranty also does not apply to any Safeline product purchased secondhand.

The purchaser must complete the owner registration card within 30 days of purchase and provide original receipt as evidence of original purchase date to file warranty claims. Registering your Safeline product assures you can be reached in the event of a safety recall. For recall information call the U.S. Government's Auto Safety Hotline at 1-800-424-9393 (202-366-0123 in D.C. area).

Safeline Corporation reserves the right to inspect all claims of defective workmanship and materials in order to determine the cause of all malfunctions. Furthermore, Safeline Corporation may exercise its right to repair, replace or refund the original purchase amount at the Company's discretion and based on the conclusions of its investigation.


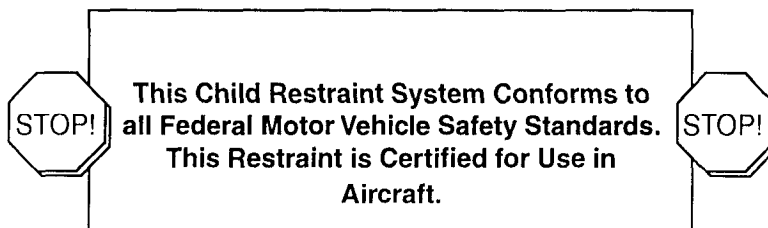


Table of Contents


Warranty	1
Get to Know Your Sit'n'Stroll™	3
Safety Guidelines	4
Securing Your Child in the Sit'n'Stroll™	5
Installing the Sit'n'Stroll™ in Your Vehicle:	
Choosing an Appropriate Vehicle Seat	6
Determining the Correct Seating Position	7
Rear-Facing Position	8
Forward-Facing Position	9
Installing the Sit'n'Stroll™ on an Aircraft	11
Converting the Sit'n'Stroll™ from Car Seat to Stroller	11
Operating the Sit'n'Stroll Brakes	13
Converting the Sit'n'Stroll™ from Stroller to Car Seat	14
Attaching the Sunshade	15
Adjusting the Harness	16
Removing the Harness	17
Installing the Harness	18
Maintenance and Care	21

International Patents and Descriptions

United States	5,104,134
	4,620,771
ECO	257141
France	257141
Great Britain	257141
Germany	P36 770 12.4
Canada	1,277,349
ECO	466429
France	466429
Great Britain	466429
The Netherlands	466429
Germany	69109384.9
Japan	2,554,798
Canada	2,046,740 (<i>Serial Number</i>)

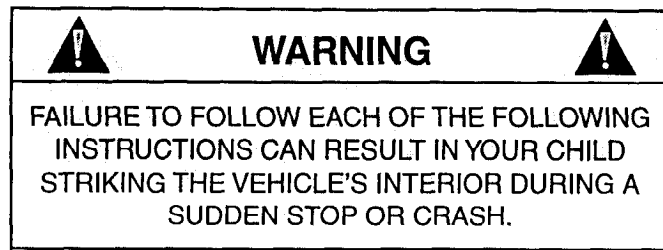

Get to Know Your Sit'n'Stroll™

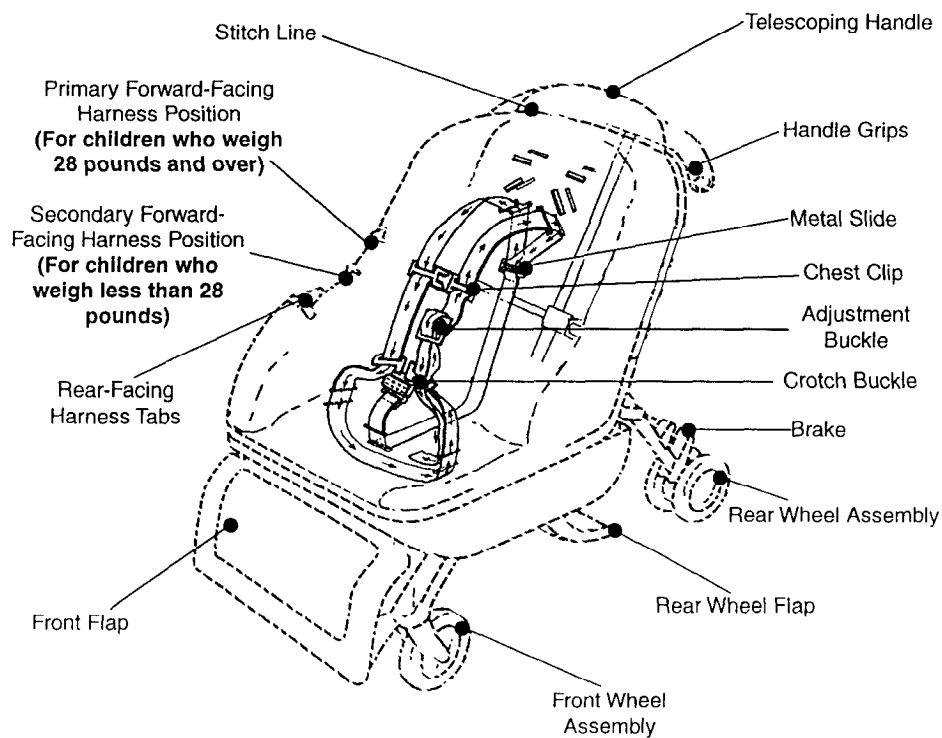


The instructions contained within this manual are guidelines for the proper use and adjustment of the Sit'n'Stroll™. Always consult with your physician to determine the specific needs of your child.



Safety Guidelines


- ◆ Always use good common sense! If you have questions about your Safeline product, please call us at 800-829-1625 or 303-757-2400.
- ◆ Do not place this rear-facing car seat in a vehicle seat with a passenger side air bag. In the event of a collision or sudden stop, the force of an inflating air bag can cause serious injury or death. Not following this warning places your child at serious risk. If your vehicle has a passenger side air bag, consult your owner's manual for child restraint installation instructions.
- ◆ Never leave your child unattended in a car.
- ◆ Never allow your child to install the Sit'n'Stroll™ in the car; an adult should always install the Sit'n'Stroll™ to ensure proper installation.
- ◆ Never allow your child to unbuckle the vehicle's seat belt while the car is in motion. Your child must remain restrained by the Sit'n'Stroll™'s 5-point harness system and the vehicle's seat belt at all times in order to be securely restrained.
- ◆ Not following these instructions could lead to your child impacting with the vehicle's interior in a sudden stop or collision.
- ◆ Do not alter or modify any part of the Sit'n'Stroll™.
- ◆ Do not place heavy objects on the Sit'n'Stroll™.
- ◆ Secure loose objects in your car. In the event of a sudden stop or collision, loose objects will continue to move and may cause serious injury to passengers.
- ◆ Diligently read and follow all instructions contained in this manual. Keep your instruction manual with you whenever you use the Sit'n'Stroll™. The instruction manual should be stored in the plastic bag and attached in the rear storage bin with the supplied hook and loop.
- ◆ This child restraint is designed for use by children who weigh between 5 and 40 pounds (2.3kg to 18.1kg) and whose height is between 18 and 40 inches (45.8cm and 101.6cm). This unit is certified for use by children in the REAR-FACING position from 5 to 25 pounds (2.3kg to 11.3kg) and in the FORWARD-FACING position from 20 to 40 pounds (9.1kg to 18.1kg).
- ◆ If this child restraint is involved in a crash, it must be replaced. The vehicle seat belt securing the infant restraint must also be replaced. Damage is not always visible.
- ◆ The shoulder straps must pass over the infant's shoulders and between the legs directly to the buckle. The child's legs should always straddle the crotch buckle. The lap straps of the harness should always come over the top of your child's legs.

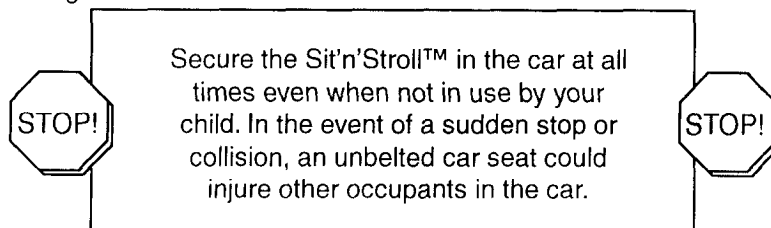

Securing your Child in the Sit'n'Stroll™




On hot or sunny days, always check the fabric and metal buckles before placing your child in the restraint to avoid burns or discomfort.

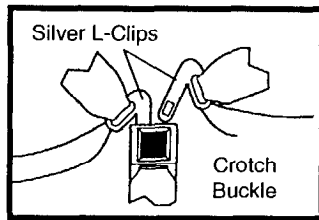

1. To unlock the restraint harness, press the red buckle release button and pull the two metal L-clips out of the buckle.
2. Place your child in the Sit'n'Stroll™. Ensure the harness passes snugly over your child's shoulders and each leg, and then snaps into the crotch buckle. Tug on the metal L-clips to ensure they are securely locked in the crotch buckle.

When using the Sit'n'Stroll™ in the rear-facing position, use the shoulder slots at or below your child's shoulders. When using the Sit'n'Stroll™ in the forward-facing position, use the shoulder slots at or above your child's shoulders. See "Adjusting the Harness" on page 16 for instructions on how to change the shoulder slots.

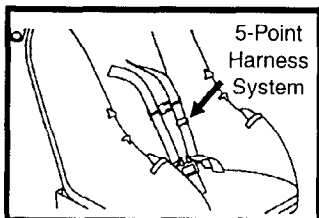

3. If the restraint is too tight or too loose for your child, use the adjustment buckle located on your child's left shoulder strap to correct the tension. See "Adjusting the Harness" on page 16 for a detailed explanation on using the adjustment buckle. Adjust the harness so there is no more than two fingers clearance between the child's body and the harness straps. After properly threading the harness back through the adjustment slide, take any excess strap and follow the harness back down through the crotch buckle, tucking the excess under the seat cover.
4. Snap the two halves of the black chest clip together. Ensure the chest clip is positioned directly over the child's chest area. Ensure the shoulder straps cannot slip off the infant's shoulders. **If the chest clip is placed incorrectly, you must remove the shoulder pads in order to ensure proper placement of the chest clip over the child's chest.**




Infants and other small children may require additional head and posture support when using the Sit'n'Stroll™ to avoid injury or suffocation. Bolsters may assist in supporting the neck and head of a small child. Retailers of children's products generally carry bolsters in their accessory aisles. If you have questions regarding bolsters, please contact Safeline or the American Academy of Pediatrics.

Installing the Sit'n'Stroll™ in Your Vehicle

Choosing an Appropriate Vehicle Seat

The Sit'n'Stroll was designed to be used in automobiles and airplanes, and should not be used in boats or on motorcycles. The Sit'n'Stroll™ must be positioned in a seat that faces the front of the vehicle. The Sit'n'Stroll™ was not designed to be used in seats facing the rear or the center of the vehicle, and it is dangerous to install and use the Sit'n'Stroll™ in any such seat. The back seat is the safest location for children 12 and under.

See the drawings below for further clarification.

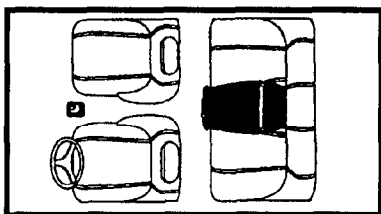


Correct Position!

The center rear seating location is generally the safest position for your child.




Correct Position!

Always install your Sit'n'Stroll™ in a vehicle seat that faces the front of the vehicle.

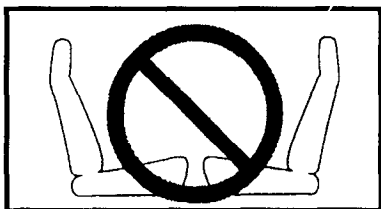


Danger!

Do not install your Sit'n'Stroll™ in a vehicle seat that faces the center of the vehicle.

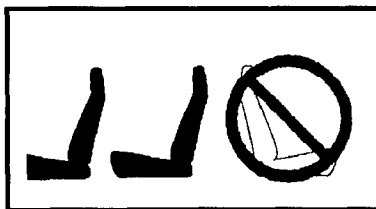

Danger!

Do not install your Sit'n'Stroll™ in a vehicle seat that faces the rear of the vehicle.

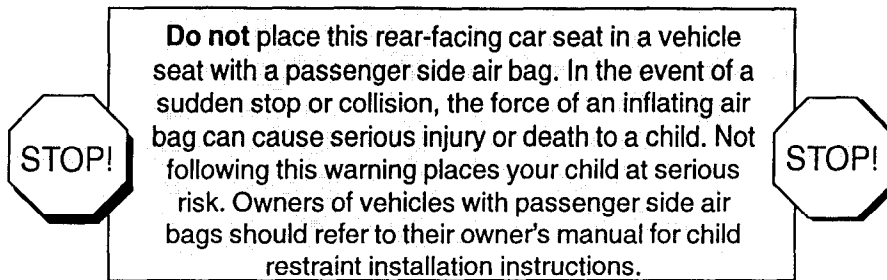


Determining the Correct Seating Position

Determining the direction you should face your child is one of the most important decisions regarding the safety of a child in a car seat. Safety experts recommend your child remain in the rear-facing position until he or she is at least 20 pounds **and** at least 1 year of age. The Sit'n'Stroll™ is certified for use by children up to 25 pounds in the rear-facing position and up to 40 pounds in the forward-facing position. Consider both the weight and age guidelines when determining the direction in which you should face your child while traveling in a vehicle. A child under one year of age may not have the physiological development necessary to sustain the forces involved in a sudden stop or collision while sitting in a forward-facing position. **Consult with your physician to determine your child's specific needs.**

- ◆ Always use the Sit'n'Stroll™ rear-facing if your baby weighs less than 20 pounds or is less than 1 year of age (and less than 25lbs), unless otherwise directed by your child's physician.
- ◆ When your child weighs at least 20 pounds, but less than 25 pounds, and the top of his or her head is below the top of the stitch line, you can still use the Sit'n'Stroll™ in the rear-facing position. However, you may use the Sit'n'Stroll™ in the forward-facing position.
- ◆ If your child's head is higher than the stitch line when he or she is sitting in the Sit'n'Stroll™ or if your child weighs more than 25 pounds, you must use the Sit'n'Stroll™ in the forward-facing position.




If your child meets all of the above guidelines for the rear-facing position, but his or her legs are too long, have him or her sit with his or her legs crossed. Your child is generally safer remaining in the rear-facing position for as long as the rear-facing guidelines are applicable.

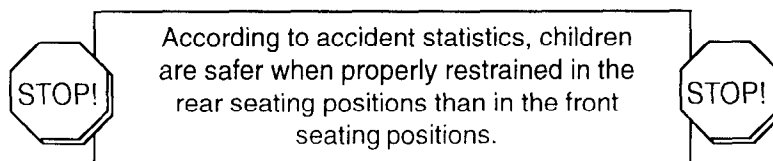





Placing your child in the forward-facing position before he or she is over one year old and over 20 pounds, places your child at serious risk. Before placing your child in the forward-facing position, consider both the weight and age guidelines for the forward-facing position. Consult with your physician to determine the individual needs of your child.

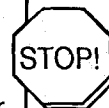


Installing the Sit'n'Stroll™ in the Rear-Facing Position

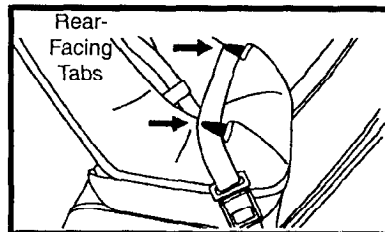

1. Thread the vehicle seat belt under the rear-facing tabs on the armrests of the Sit'n'Stroll™. Secure the vehicle seat belt on the other side of the Sit'n'Stroll™ in the vehicle seat buckle. Rock the Sit'n'Stroll™ from side to side to ensure the vehicle seat belt holds the unit firmly in place. If the vehicle seat belt is loose, press down firmly on the armrests and tug on the vehicle seat belt until it retracts and tightens.

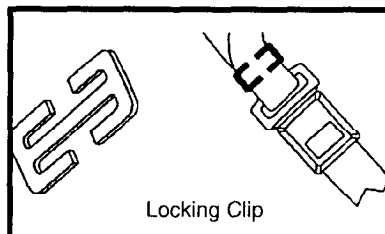


2. With continuous-loop lap/shoulder belts that allow the buckle to slide freely up and down the belt, you must use the metal locking clip (enclosed). To use the clip, first install the Sit'n'Stroll™ and tighten the vehicle seat belt by pulling on the shoulder belt. Grip the shoulder and lap belts together about ½ inch from the buckle and slide the locking clip over both belts (see picture). Rock the Sit'n'Stroll™ from side to side to ensure the vehicle seat belt holds the unit firmly in place.

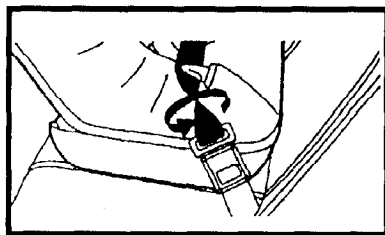

3. For manually adjusted seat belts that are not automatically tightened by a retraction system, adjust the belt until it is tight. Rock the Sit'n'Stroll™ from side to side to ensure the vehicle seat belt holds the unit firmly in place.



When using the Sit'n'Stroll™ in the rear-facing position, thread the Sit'n'Stroll™'s 5-point harness system through the shoulder slots at or below the shoulders of the child.

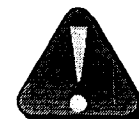



If the vehicle seat belt loosens, twist the adjustment buckle and the end of the belt twice before buckling it. This should prevent the adjustment system from inadvertently loosening.



If the lap belt you are using will not hold the unit firmly in place or will not reach around the car seat, use another seating position in the vehicle. If no other position exists with a lap belt that will remain tight, contact your auto dealer to have one installed. Like all car seats, the Sit'n'Stroll™ must always be anchored with a lap belt that will remain tight at all times.



For infants, you should install the Sit'n'Stroll™ at a 45-degree angle. The Sit'n'Stroll™ automatically positions your child at a 45-degree angle when placed on a flat surface. Because not all automobile seats are flat, the seat may install at an angle less than 45-degrees. To correct this problem, you can roll a towel and secure it under the front edge of the Sit'n'Stroll™ where the vehicle seat bottom and back meet. For more information on this subject, please contact the American Academy of Pediatrics.

Installing the Sit'n'Stroll™ in the Forward-Facing Position




For your child's safety, the Sit'n'Stroll™'s patented design provides double belted protection for your child and is designed to use your automobile's seat belt the way it was originally designed—to go across the front of the occupant.

Forward-Facing Seat Belt Positions

The Sit'n'Stroll™ is equipped with two sets of tabs for the forward-facing seating position. The tab position that is best suited for your child is determined by his or her height and weight.


- ◆ If your child is taller than 33 inches and weighs over 28 pounds, the vehicle seat belt should be secured in the primary forward-facing seat belt position (see diagram on next page).
- ◆ If your child is under 33 inches and weighs less than 28 pounds, the vehicle seat belt should be secured in the secondary forward-facing seat belt position (see diagram on next page).

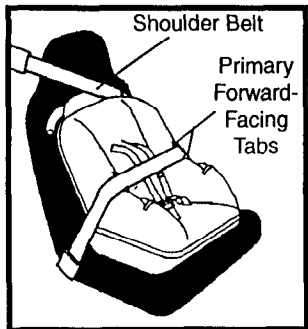

Primary Forward-Facing
Seat Belt Position

1. Pull the vehicle seat belt around the front of the Sit'n'Stroll and position it tightly between the primary forward-facing tabs. Secure the vehicle seat belt on the other side of the Sit'n'Stroll™ in the vehicle seat buckle. Rock the Sit'n'Stroll™ from side to side to ensure the vehicle seat belt holds the unit firmly in place.

2. With continuous-loop lap/shoulder belts that allow the buckle to slide freely up and down the belt, you must use the metal locking clip (enclosed). To use the clip, first install the Sit'n'Stroll™ and tighten the vehicle seat belt by pulling on the shoulder belt. Then grip the shoulder and lap belt together and slide the locking clip over both belts. Rock the Sit'n'Stroll™ from side to side to ensure the vehicle seat belt holds the unit firmly in place.

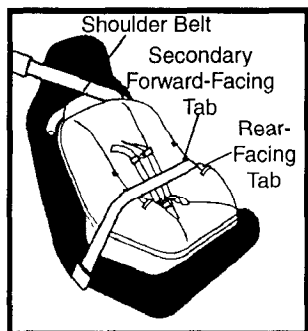

Secondary Forward-Facing
Seat Belt Position


3. For manually adjusted seat belts that are not automatically tightened by a retraction system, adjust the belt until it is tight. If the vehicle belt loosens, twist the adjustment buckle and the end of the belt twice before buckling it. This should prevent the adjustment system from inadvertently loosening. Rock the Sit'n'Stroll™ from side to side to ensure the vehicle seat belt holds the unit firmly in place.



When using the Sit'n'Stroll™ in the forward-facing position, thread the Sit'n'Stroll™'s 5-point harness system through the shoulder slots at or above the shoulders of your child.



Installing the Sit'n'Stroll™ on an Aircraft

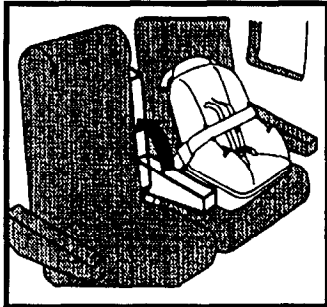


1. Contact the airline prior to taking the child restraint on board the aircraft.
2. Install the Sit'n'Stroll™ in the airline seat the same way you would when using it in a car. You may need to raise the armrests in the aircraft to allow room for the Sit'n'Stroll™. After the Sit'n'Stroll™ is in place, you can usually lower the armrest back into place. If you are seated behind the bulkhead where the armrests don't raise, you can usually slide the Sit'n'Stroll™ like a tray in between the armrests and the seat cushion.
3. Regular luggage checking of a Sit'n'Stroll™ may result in damage to the unit. We suggest you gate check your unit if necessary.



Contact your airline and inquire if they offer special rates for children traveling in car seats.



In private aircraft, do not install the car seat where it will block an exit from the aircraft or where it could block or inhibit the use of flight controls.

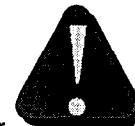

Do not place the car seat next to an emergency exit or a seat row which contains an emergency exit.

Converting the Sit'n'Stroll™ from Car Seat to Stroller

For your child's comfort, the Sit'n'Stroll™ utilizes an advanced torsional suspension system that is active while the unit is in stroller mode. It is normal for the stroller to flex and have a springy feel just like your car. The suspension system aids in ride comfort for your child and prevents damage to the components. The Sit'n'Stroll™ handle incorporates flex steering which means the "looseness" you feel is normal and aids in maneuvering the stroller.



The Sit'n'Stroll™ is designed to be converted from car seat to stroller and back again while holding the child, still secured in the Sit'n'Stroll™, OFF THE GROUND. If the Sit'n'Stroll™ is converted on the ground, the mechanism may jam.



The Sit'n'Stroll™ is to be used only by one child at a time. Never place more than one child in the seat.



Until you are well practiced in following these instructions, do not attempt to convert from car seat to stroller or vice/versa with your child in the seat.

Always secure your child using the Sit'n'Stroll™'s 5-point harness system.




Individuals with a history of back trouble are advised to exercise caution or refrain from quick movement when converting the Sit'n'Stroll with a child in it. Do not attempt to convert the unit if you are at risk of back injury.




WARNING




Excess weight placed in the storage bin may cause a hazardous unstable condition. The manufacturer recommends not to exceed 10 pounds. Parcels or accessory items or both placed on the unit may cause the unit to become unstable.

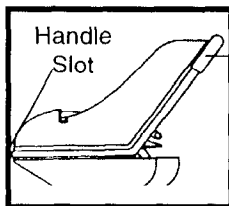

Handle Slot
Slider Grip

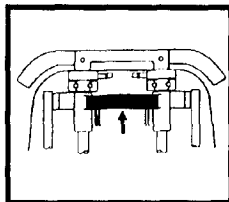

1. Place one hand in the handle slot located between your infant's feet. With your other hand, grasp the slider grip located on the back of the Sit'n'Stroll™. Gripping both handles securely, remove the Sit'n'Stroll™ from your vehicle. Squeeze the red lock release evenly with your fingers and move the slider grip down. This deploys the wheels.
2. When the slider stops, relax your finger pressure on the red lock release and allow it to latch securely in its lowest position. Pull up on the grip without squeezing the red lock release to ensure the wheels are locked. Place the Sit'n'Stroll™ on the ground.

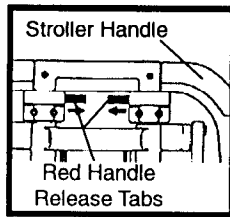

3. With one hand, compress the red handle release tabs located under the stroller handle, and with the other hand, pull up on the stroller handle. Select one of the four (4) handle height positions and release the red handle release tabs to lock the stroller handle into place.



Never use the stroller when 4 holes are showing on the handle tube. Always ensure the red handle release tabs are engaged with one of the four sets of holes in the handle tubes. Before using the Sit'n'Stroll™ as a stroller, ensure the handle is locked and cannot slide up or down.



The arm moving the slider grip should be on the side of the Sit'n'Stroll™. You do not want your arm over the top of the stroller handle.





When converting from the car seat to the stroller position, support the Sit'n'Stroll™ with your hip. Do not block the front or the rear wheel flaps with your leg.

When converting the Sit'n'Stroll™, right-handers should face the child's left side.

Operating the Sit'n'Stroll™ Brakes

- ◆ If your Sit'n'Stroll™ was manufactured before September 19, 1998, locate the red brake tabs on the aluminum legs above your rear wheels. Use your hand to push the brake straight down the metal tube. It will engage with the spokes of the wheels and will lock the stroller in place. To unlock the brake, pull in the opposite direction until the brake has disengaged from the wheel spokes and locks in its uppermost position.
- ◆ If your Sit'n'Stroll™ was manufactured after September 19, 1998, your brakes will be located directly on the rear wheel set. To engage the brakes, simply push the red brake tab toward the ground. Disengage the brake by pulling the red brake tab back toward the body of the Sit'n'Stroll™.

Converting the Sit'n'Stroll™ from Stroller to Car Seat

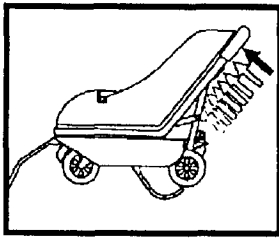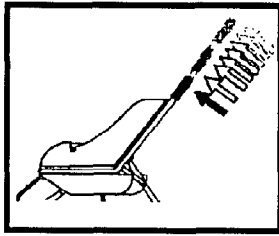

1. Compress the red handle release tabs and push the stroller handle down until it locks in its lowest position.
2. Align the front wheels by rolling the stroller back 6 to 12 inches. Place one hand in the slot handle located between your infant's feet. With your other hand, grasp the slider grip located on the back of the seat. **Lift the seat off the ground.**
3. Squeeze the red lock release evenly with your fingertips and slide the slider grip up to its stop position. Relax your finger pressure on the red lock release. Push down on the slider grip to ensure the wheels are properly locked. The wheels should now be stored behind their protective flaps.



Maneuvering Over Curbs: Always back up to the curb, pull up on the telescoping handle and lift the rear wheels over the curb. Pull the stroller backwards and allow the front wheels to ride up over the curb. Never push down on the telescoping handle to prop the front wheels on the curb first. The pressure placed on the handle may cause damage.



Locking the Wheels: When converting the Sit'n'Stroll™ from stroller to car seat, the wheels must lock in the uppermost position. To ensure the wheels lock properly, keep your finger tips on the slider and squeeze evenly over the entire surface of the slider button until the wheels are up. Grab the top of the seat (near the red handle release tabs) with your thumb and squeeze your thumb and fingers together until the wheels click into place, indicating the wheels are properly locked.



1. Hold the unit in the air to convert.



2. Deploy the wheels.




3. Place the Sit'n'Stroll on the ground and deploy the handles.



4. Away you go!

The Sit'n'Stroll™ Sunshade

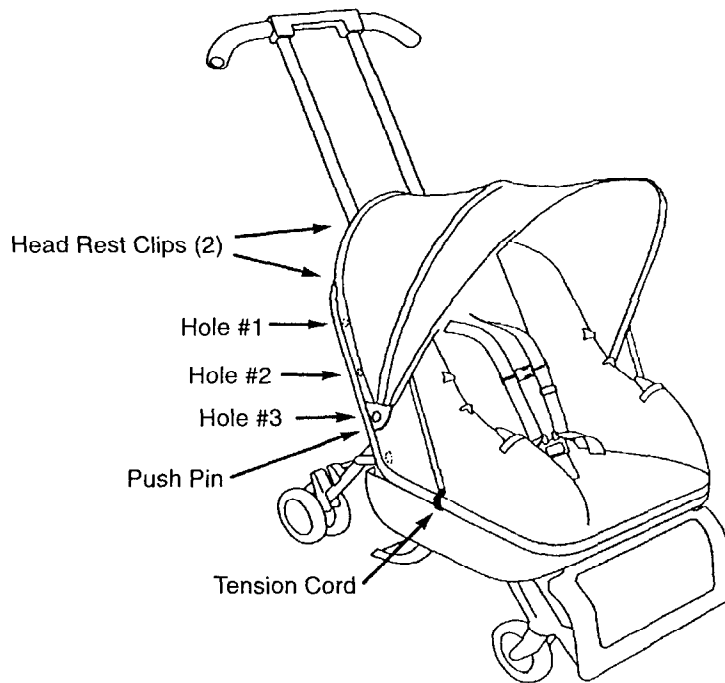

Attaching the Sunshade

1. Attach the head rest clips to the top of edge of the seat back, on either side of the handle tubes.
2. Push the edge of the seat cover forward exposing the plastic shell. Locate the third hole down from the top.
3. Keep the seat cover fabric pushed forward and press the push pin (sewn into the bottom portion of the sunshade) into the third hole until it clicks into place. Repeat this procedure for both sides of the sunshade.
4. Pull the tension cords down and attach to the bottom of the seat (as shown) to increase the sunshade's coverage. Pull the tension cord back over the sunshade and attach to the back of the seat in order to pull the shade away from the baby.

Removing the Sunshade

1. Reach behind the seat shell and use your finger tips to press the push pins outward until they pop free from the seat shell hole.
2. Carefully remove the remaining head rest clips and tension cord clips attached to the side of the seat's shell.


Adjusting the Harness



For your child's safety, the Sit'n'Stroll™ utilizes a continuous-loop 5-point harness system—the kind most recommended by safety experts.





Never use the Sit'n'Stroll™ without the harness securely buckled.

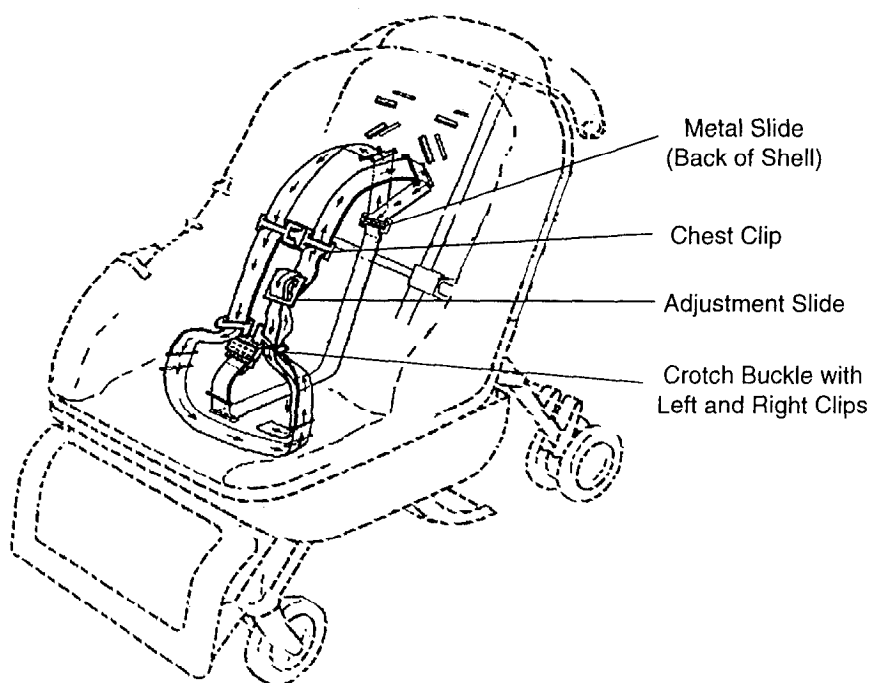

Generally speaking, the tighter the harness, the more effective it will be in protecting your child in the event of a sudden stop or collision. However, use your best judgement and gauge your baby's comfort when using the Sit'n'Stroll™. As your child grows you will need to make adjustments to the harness system. For minor harness adjustments, use the adjustment slide located on your baby's left shoulder strap.

For major harness adjustments, move the shoulder straps to a higher placement on the back of the seat as your baby gets larger. Additionally, use the following instructions to remove the fabric cover for washing or cleaning.

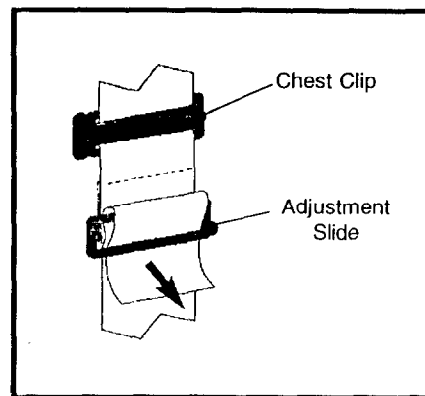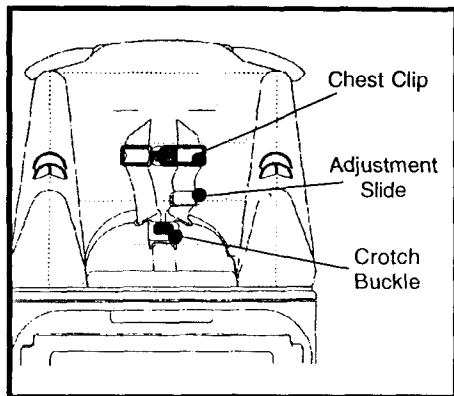


The harness must always be routed through (i.e. behind and under) the plastic shell. Never route the harness through the fabric cover only.




After making harness adjustments, ensure the harness is threaded through the adjustment buckle properly. (See adjustment slide detail above).


Removing the Harness

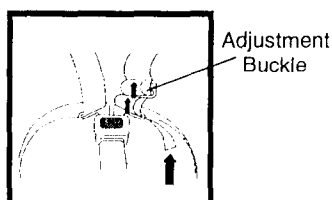


1. The excess harness is stored under the fabric seat cover on your child's left side. Pull the harness out from under the fabric cover, through the silver L-clip in the crotch buckle, and out of the silver adjustment buckle.

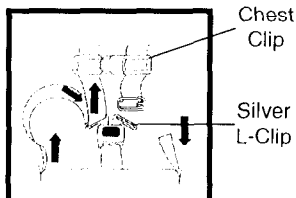

2. Grasp the harness on your child's right hip (your left side when facing the Sit'n'Stroll™) and pull. When the harness is completely removed from underneath the stroller, pull it out of the silver L-clip on the left side of the crotch buckle.

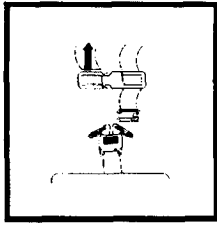

3. Unthread the harness from the black chest clip on the child's right side.

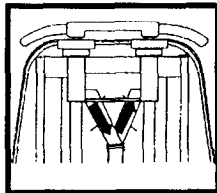

4. Turn the Sit'n'Stroll™ around and face the back of the car seat. Pull the harness through the back of the seat, and out of the metal slide (on the back of the seat).


5. Face the front of the stroller and pull the harness out of the slot on the left side of the seat where your child's back rests.

6. The harness should now be completely clear of the stroller. If you plan to wash the harness, remove the black chest clip. If you are adjusting the height of the harness, leave it threaded through the chest clip.




During the removal and the installation of your harness, you will NEVER pull any buckles through the slots in the seat fabric or seat shell.

Installing the Harness

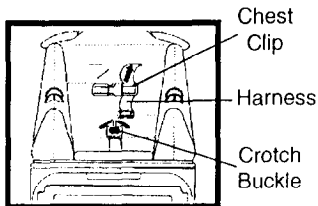

1. Face the Sit'n'Stroll™ and ensure the two silver clips are snapped into the crotch buckle. The black chest clip should also be snapped together. The Sit'n'Stroll™ should be in the stroller position, fabric cover on and telescoping handle down.
2. Thread the harness (blue strap with silver buckle permanently sewn to one end) through the chest clip. Pull the chest clip down to the bottom of the harness so it is touching the silver buckle. As a point of reference, the silver buckle should be on your right side (as shown) and the open end of the chest buckle should be on your left.

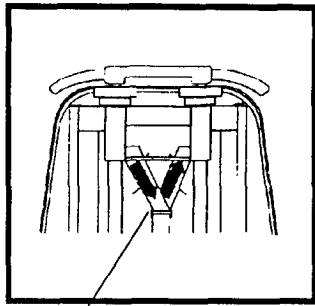


Metal Slide

3. Locate the three levels of slots on the body of the seat (where your child's back will rest). Select the level that fits your child and thread the open end of the harness through the slot on the right (from front to back) through the car seat. Pull the harness through until the silver buckle is about two to three inches above the bottom of the seat.


4. Turn the unit around so you are facing the back side of the car seat. Thread the harness behind the handle mechanism labeled "Squeeze and Push Down."

5. Thread the harness through the metal slide laying loose on the back of the seat. After making a single loop through the buckle, pull the harness up underneath the handle system and locate the corresponding hole on the back of the seat. Ensure the harness is flat against the seat shell and does not interfere with the mechanism that deploys the wheels.

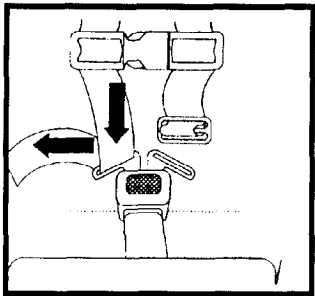

6. Thread the harness through the corresponding hole on your right side, and push the harness to the front of the seat. Pull the slack through to the front of the seat.


7. Face the front of the seat. Thread the end of the harness through the black plastic chest clip on your child's right side (your left side when facing the seat). Pull the excess harness through the chest clip (from front to back) and thread it into the silver L-clip (from front to back) in the crotch buckle. After you have pulled the harness through the L-clip, ensure you have not twisted the harness.

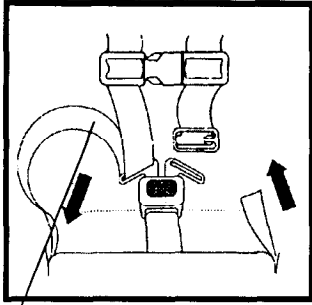

Make Loop Large Enough to Fit Your Child's Leg.

8. Locate the slot in the fabric cover and seat shell located near your child's right hip. Push the harness through this hole, reach under the stroller and pull the harness through. Leave a loop of harness large enough for your child's leg between the silver L-clip and the slot on the bottom of the seat. Also ensure you leave enough room for your child's shoulders in the shoulder belt area.

9. Locate the matching slot on the bottom of the seat near your child's left hip. Grab the harness (still under the stroller) and thread it through this slot and through the fabric cover until you see it emerge above the seat. Pull the excess harness through the slot on the bottom of the seat. The harness should lay flat against the underneath side of the stroller.

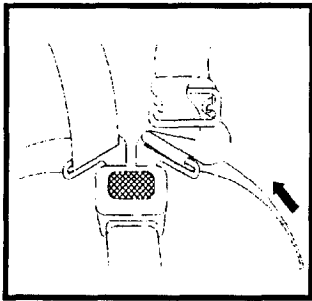


10. Thread the end of the harness through the silver L-clip (from back to front) located in the left side of the crotch buckle (your right side when facing the seat). Thread the end of the harness through the bottom of the adjustment buckle (from back to front) and then through the top of the adjustment buckle. Flip the webbing over the top bar of the adjustment buckle and thread it back down through the bottom opening adjustment buckle. Your harness should now be secured in the adjustment buckle and should not slide or change position. Pull the excess harness through the adjustment buckle and ensure it is tight. The threading process is now complete.

11. Feed the excess harness through the silver L-clip, through the slot on the fabric cover and store the remaining harness between the fabric cover and the seat shell.

Maintenance and Care

Washing the Cover and Harness

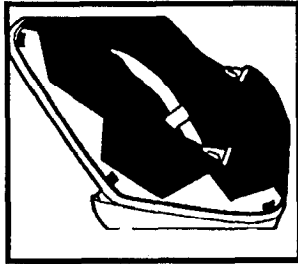

1. Remove the harness from the Sit'n'Stroll™ and detach all buckles.
2. Release the clips securing the fabric cover to the car seat and remove the cover from the plastic shell.
3. Wash the cover and harness in cold water on gentle cycle with a mild detergent. Do not use bleach. Hang the fabric cover to dry or tumble dry without heat. Do not dry in a heated dryer.

Washing the Shell

Wash the car seat shell and stroller parts with a mild soap and warm water using a soft cloth or sponge.

Wheels and Handle System

If needed, clean the wheels and telescoping handle with Armor All® spray lubricant.

To lubricate the moving parts of the Sit'n'Stroll™, use a silicon wax-based lubricant. Do not use an oil-based lubricant anywhere on the Sit'n'Stroll™. An oil-based lubricant will corrode the plastic components and will inhibit further operation of the unit. You may order the proper lubricant directly from Safeline Corporation.

Replacement Parts

We have carefully designed all of the high wear parts of the Sit'n'Stroll™ to be easily replaceable. For increased longevity and years of enjoyment, contact our main office to order replacement parts at reasonable prices.



800-829-1625

Made in Taiwan, R.O.C.
Under the Supervision of Safeline Corporation



SAFELINE Booster Seat

Patents Pending



Safety. Comfort. Style.

1-800-829-1625

1777 South Bellaire Street, Suite 330 ♦ Denver, Colorado 80222

Phone: (303) 757-2400 ♦ Fax: (303) 757-1988

Email: service@safelinecorp.com

Limited Six-Month Warranty

All Safeline products purchased from an authorized Safeline dealer are warranted against defective materials and workmanship for six months from the original date of purchase. This warranty does not include any problems associated with normal wear, abuse, misuse or negligence by the purchaser. This warranty also does not apply to any Safeline product purchased secondhand.

The purchaser must complete the owner registration card within 30 days of purchase and provide original receipt as evidence of original purchase date to file warranty claims. Registering your booster seat assures you can be reached in the event of a safety recall. For recall information call the U.S. Government's Auto Safety Hotline at 1-800-424-9393 (202-366-0123 in D.C. area).

Safeline Corporation reserves the right to inspect all claims of defective workmanship and materials in order to determine the cause of all malfunctions. Furthermore, Safeline Corporation may exercise its right to repair, replace or refund the original purchase amount at the Company's discretion and based on the conclusions of its investigation.

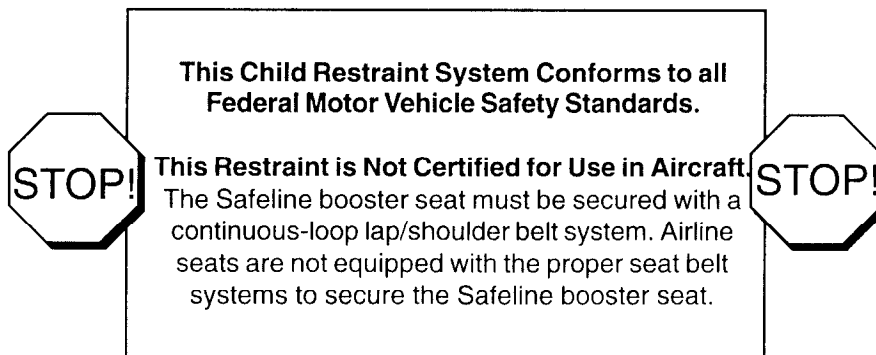



Table of Contents

Warranty	1
Quick Reference Chart	3
General Safety	3
Using the Proper Vehicle Safety Belt System	4
Using an Appropriate Vehicle Seat	4
Installing the Safeline Booster Seat (Models #4000 and #4500)	5
Correct Shoulder Belt Position	6
Installing the Safeline Booster Base (Model #4800)	6,7
Attaching the Safeline Booster Seat Accessories	8,9
Caring for Your Safeline Booster Seat	9


STOP!

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address and the restraint's model number and manufacturing date to Safeline Corporation, 1777 South Bellaire Street, Suite #330, Denver, Colorado 80222 or call 1-303-757-2400. For recall information, call the U.S. Government's Auto Safety Hotline at 1-800-424-9393 (202-366-0123 in D.C. area).

STOP!



WARNING!



FAILURE TO FOLLOW EACH OF THE FOLLOWING INSTRUCTIONS CAN RESULT IN YOUR CHILD STRIKING THE VEHICLE'S INTERIOR DURING A SUDDEN STOP OR CRASH. FAILURE TO FOLLOW EACH OF THE INSTRUCTIONS LABELED ON THE BOOSTER SEAT CAN RESULT IN YOUR CHILD STRIKING THE VEHICLE'S INTERIOR DURING A SUDDEN STOP OR CRASH.

The Safeline Booster Seat Quick Reference Chart



This child restraint is designed for use only by children who weigh between 30lbs and 70lbs (13.6kg and 31.7kg) and whose height is between 37 inches and 54 inches (94cm and 137cm).

General Safety

- ◆ Always use good common sense! If you have questions about your Safeline product, please call us at 800-829-1625 or 303-757-2400.
- ◆ Never leave your child unattended in a car.
- ◆ Never allow your child to install the Safeline booster seat in the car; an adult should always install the Safeline booster seat to ensure proper installation.
- ◆ Do not allow your child to unbuckle the vehicle's seat belt.
- ◆ Do not alter or modify any part of the Safeline booster seat.
- ◆ Store the Safeline booster seat in a safe place when not in use.
- ◆ Do not place heavy objects on the Safeline booster seat.
- ◆ Secure loose objects in your car. In the event of a collision or sudden stop, loose objects will continue to move and may cause serious injury to passengers.
- ◆ Secure the Safeline booster seat in the car at all times, even when not in use by your child. In the event of a collision or sudden stop, an unbelted car seat or booster seat will continue to move and may cause serious injury to passengers.
- ◆ Keep your instruction manual with you whenever you use the Safeline booster seat. The instruction manual should be stored within the fabric cover on the base of the unit.
- ◆ Ensure the fabric and plastic parts of the booster seat are not too hot for your child before placing your child in the seat.
- ◆ When your child falls asleep in the booster seat, ensure his or her head is properly supported against the sides of the seat.



WARNING!



USE ONLY THE VEHICLE'S LAP AND SHOULDER BELT SYSTEM WHEN RESTRAINING THE CHILD IN THIS BOOSTER SEAT. USE OF OTHER TYPES OF VEHICLE SEAT BELT RESTRAINTS MAY NOT PROPERLY SECURE YOUR CHILD WHEN USED WITH THE SAFELINE BOOSTER SEAT, AND MAY CAUSE SERIOUS INJURY TO YOUR CHILD IN THE EVENT OF A SUDDEN STOP OR COLLISION.


Using the Proper Safety Belt System

The Safeline booster seat should not be used in boats or on motorcycles. The Safeline booster seat should only be used with a vehicle's continuous-loop lap/shoulder belt system. Motorized shoulder belts, door mounted lap and shoulder belts and lap belts alone should NEVER be used with the Safeline booster seat. These systems do not adequately secure your child in the Safeline booster and may allow your child's head to impact with interior surfaces of a car in the event of a sudden stop or collision.

Using an Appropriate Vehicle Seat

The Safeline booster seat must be positioned in a seat that faces the front of the vehicle. The Safeline booster seat is not designed to be used in seats facing the rear or the center of the vehicle, and it is dangerous to install and use the Safeline booster in any such seat.

See the drawings below for further clarification.

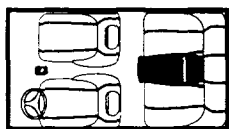

Correct Position!

Always install your Safeline booster seat in a vehicle seat that faces the front of the vehicle.



Danger!

Do not install your Safeline booster in seats that face the rear of the vehicle.



Danger!

Do not install your Safeline booster seat in vehicle seats that face the center or side of the vehicle.



When choosing the best location to install the Safeline booster seat in your vehicle, please consider accident statistics show children are safer when properly restrained in a rear seating position than in a front seating position.



Installation Instructions

Safeline Mission Control™ Booster with Base (Model#4000)
Safeline Pilot™ Booster with Base (Model#4500)



Never place anything on your vehicle seat to raise the Safeline booster seat. Doing so may create slack in the vehicle's belt system. In a sudden stop or crash, a loose vehicle belt system may not properly restrain your child.



1. Determine the safest location in the vehicle to install the Safeline booster seat. The back seat is the safest location for children 12 and under. Place the booster seat in this location and push the back firmly into the vehicle's seat.



2. Place your child in the booster seat. Ensure he or she is sitting upright with his or her back against the back of the booster seat, legs flat on the base of the booster and knees facing forward.

Shoulder Belt Positioner



Lap Belt Path

3. Pull the seat belt over your child's lap. Secure the lap portion of the seat belt in the lap belt guide below the arm rests. **Ensure the lap belt is positioned over your child's hips. Positioning the lap belt too high on your child's abdomen could cause serious injury in a sudden stop or collision.** Adjust the shoulder belt across your child's torso, guiding the belt over his or her shoulder and into the correct slot in the shoulder belt positioner. After your child is secured in the Safeline booster seat, check the shoulder belt position. The shoulder belt should cross over your child's shoulder and not his or her neck or face.

Correct Shoulder Belt Position

If you have chosen the correct slot in the belt-positioner, the belt should look like the picture on the far left.

Correct!



Correct Position!

The vehicle's seat belt is over the child's shoulder properly restraining her.

No!



Danger!

Only the lap belt is securing the child. Using the lap belt only will not provide safety for her neck, head and back in the event of a collision.

No!



Danger!

Placing the vehicle's seat belt on the child's face, neck or arm may cause serious injury in a sudden stop or collision.



Ensure the vehicle's seat belt moves freely through the shoulder belt positioner. The shoulder belt must be able to self-adjust and stay snug against your child at all times. Pull the shoulder belt out and release it to make sure it readjusts.

Children can move a shoulder belt out of its correct position, which could result in serious injury during a sudden stop or collision. Do not allow your child to install or adjust the Safeline booster seat.

Installing the Safeline Booster Cushion

Model #4800

The Safeline booster base is suitable for children weighing between 40lbs and 70lbs (18.2kg and 31.7kg). The booster base should only be used in vehicle seats that face forward. The booster base was not designed to be installed in seats that face the center or the rear of the vehicle, and installation in any such seat could be dangerous. The Safeline booster base must be secured with a continuous-loop lap/shoulder vehicle safety belt. Motorized shoulder belts, door mounted lap and shoulder belts, and lap belts alone should NEVER be used with the Safeline booster base. These systems are not compatible with the Safeline booster base and may not provide adequate protection for your child while sitting in the Safeline booster base.

Installing the Safeline Booster Base (continued)

Model #4800



1. Determine the safest position in the vehicle to install the Safeline booster base. The back seat is the safest place for children 12 years and younger. Place the Safeline booster base on the vehicle's seat, making sure it is firmly pressed against the vehicle's seat back.
2. Place your child in the Safeline booster base. Ensure he or she is sitting upright, with his or her bottom pushed to the back of the seat. His or her back should be against the vehicle seat back, legs flat on the base of the booster and knees facing forward.

3. Secure the vehicle's seat belt tightly across your child's lap. Use the lap belt guide to position the vehicle's lap belt. **Ensure the lap belt is positioned over your child's hips. Positioning the lap belt too high on your child's abdomen could cause serious injury in a sudden stop or collision.** Adjust the shoulder belt across your child's torso, guiding the belt over his or her shoulder. After your child is secured in the Safeline booster seat, check the shoulder belt position. **The vehicle shoulder belt should cross over your child's shoulder and not his or her neck or face.**



Do not position the shoulder belt across your child's face or neck. Do not allow your child to move the shoulder belt away from his or her shoulder or he or she may suffer injury in the event of a sudden stop or collision.





Always Use Good Common Sense!
Never let children play with sharp or pointed objects while traveling in car seats or automobiles!




Attaching the Booster Seat Accessories

Proper installation and use of the accessories will lead to years of enjoyment while traveling in your vehicle. The accessory tray is not a restraint device and is meant for entertainment purposes only. Strictly adhere to the following installation instructions to avoid improper detachment during a sudden stop or collision.

Installing the Accessory Tray

As Easy as 1-2-3!

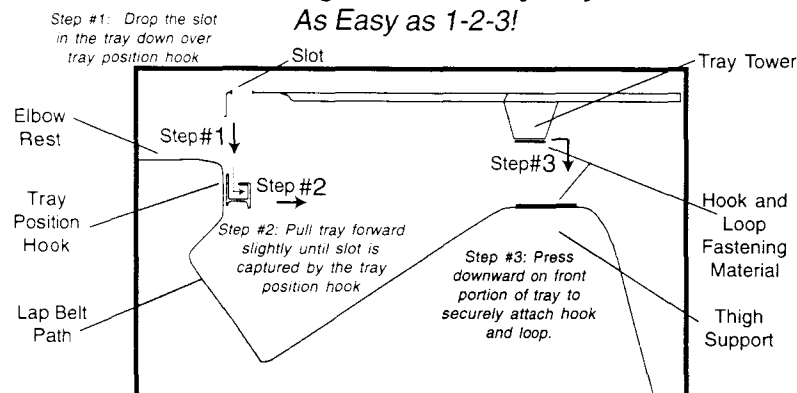

Cross Section of the Accessory Tray and Accessory Tray Positioner



Attach Hook Here



Accessory Tray Position Hook




Contact Points

1. Locate the two small ovals of Hook material (commonly known as Velcro®) with self-adhesive backing included in your Safeline booster box. On the under side of the accessory tray, locate the accessory tray towers (see above drawing). Attach an oval of hook material to each of the towers.
2. Find the accessory tray position hooks located just below the elbow rests. Position the accessory tray at a slight angle and slide into both hooks.
3. While pulling forward slightly on the tray, press the tray towers downward to make secure contact of hook and loop between the tray tower and thigh support.

Installing the Cup Holder

The cup holder can be installed on either the right or left side of the seat base.

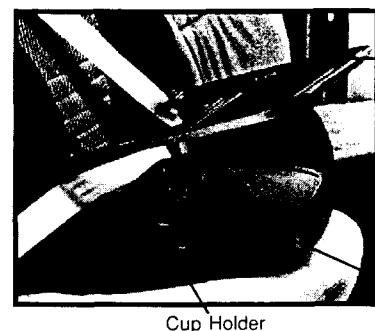

1. Locate the rectangular webbing loops sewn on either side of the booster base.
2. On the back of the cup holder, find the installation tab. Insert the installation tab of the cup holder through the webbing loop on either side of the seat base, and allow the base of the cup holder to rest against the booster base.

Caring for Your Safeline Booster Seat

Removing the Cover

1. Place the booster seat face down on a flat surface. Locate the zipper, which attaches the base to the back of the booster seat. Unzip the back from the base.
2. Hold the back of the booster seat back and unzip the cover. Carefully slide the foam center out of the fabric cover.
3. Unzip the fabric of the booster's base. Carefully slide the foam base out of the fabric cover.

Washing the Fabric Cover

After the foam core is removed from the fabric cover, you can wash the fabric cover in cold water. Use a gentle cycle and mild detergent. Do not wash the cover with other garments. Do not use detergents with dyes or perfumes. Do not dry clean. Tumble dry with no heat or lay flat to dry. Do not use heat in the dryer. Do not hang the cover to dry.

Washing the Foam Core

Dampen a soft cloth or sponge with water and wipe the surface of the foam core. If soap is required, use a mild soap that contains no dyes or perfumes. Do not use detergents, solvents or cleaning chemicals to wash the foam core.



800-829-1625

Made in Denver, Colorado
Cover Sewn in Mexico